

 
SAREGAMA
CARVAAN[®]
— **MUSICBAR** —

U S E R M A N U A L



M O R E T H A N ^{*just*} ^ A S O U N D B A R

TOP VIEW: BUTTONS ON CARVAAN MUSICBAR

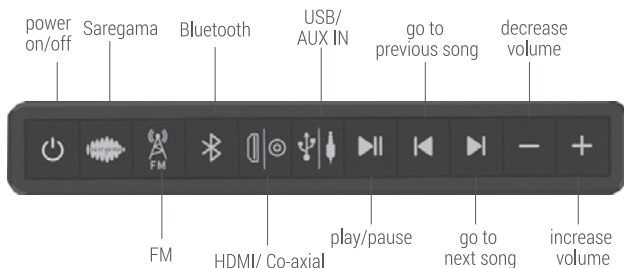

SET UP PROCESS

POWER ON THE DEVICE

To power on and enjoy the Carvaan Musicbar follow the steps below:

1. Connect the Power Adapter to the wall plug and the other end to "DC in" port on the back panel of the device
2. Switch on the power from wall plug
3. Click on the "Power" button on the top panel of the device/remote to power it on
4. Enjoy your music on the Carvaan Musicbar



Note:

1. Use supplied power adapter only
2. The device requires to be connected to AC power with the bundled adapter at all times for operation
3. When device is connected to a power source, the power button on the device panel is backlit in red colour

MODES

All the modes work on the Carvaan Musicbar irrespective of it being connected to TV.

To choose a mode, press the corresponding mode button on the top panel of the device/remote

When the device is powered on and a mode is selected, the power button and mode button on the device are backlit in green and blue colour respectively



SAREGAMA

1000 pre-loaded evergreen songs by legendary artistes, this is the default mode on first power on/reset

Press 'Next/Previous' button on remote/unit for 3-4 seconds to move 10 songs forward/backward respectively



FM

Listen to local FM stations. To tune to FM, press FM mode button

To auto tune FM stations, follow the steps:

Step 1: Press play/pause button for 3-4 seconds

Step 2: Searching for all FM signals will start. You will hear a searching sound and each FM station will play for approx. 3-4 seconds till all stations are tuned

Step 3: Press next/previous button to go to next/previous station

FM frequency: 87.5 to 108 MHz

Note: It is recommended that the loose end of the connected antenna is placed near a window for improved FM reception



BLUETOOTH*

Pair your mobile phone/tablet with the Carvaan Musicbar. Enjoy songs stored on your personal mobile phone/tablet on the device

**support for Bluetooth v5.0*

USB / AUX IN**

1. Press the USB/AUX button on the unit to switch between USB and AUX mode
OR

Press USB or AUX mode button on the remote to activate respective modes

2. Plug in a USB into the USB port on the back panel of Carvaan Musicbar to enjoy your personal collection of songs
3. You can also connect an Aux cable in the Aux IN port on the back panel of the device to play songs from your phone / tablet / TV / laptop

***support for USB 3.0*

***supports USB pendrive upto 32 GB*

CONNECT CARVAAN MUSICBAR TO YOUR TV

HDMI* / CO-AXIAL**

The most preferred way to connect Musicbar & TV is HDMI



****Supports HDMI ARC only*

To connect the Carvaan Musicbar to TV via HDMI

1. Plug one end of the HDMI cable to HDMI (ARC) port on the TV and the other end to the HDMI port on the back panel of the device
2. Turn on the TV
3. Press the HDMI/Co-axial button on the unit to switch between HDMI and Co-axial mode

OR

Press HDMI mode button on the remote to activate HDMI mode

4. Enjoy the TV audio on the Carvaan Musicbar

In case the TV is not compatible with HDMI Audio Return Channel (ARC), connect a Co-Axial cable from the TV to the device to enjoy the TV sound output on device speakers

1. Connect the Co-Axial cable to the back panel of device and the audio out port on TV
2. Turn on the TV
3. Press the HDMI/Co-Axial button on the unit to switch between HDMI and Co-axial mode

 
OR

Press Co-Axial mode button on the remote to activate Co-Axial mode

4. Enjoy the TV audio on the Carvaan Musicbar


Note: Your TV Audio Settings need to set to 'External Speakers' and disable TV speakers

FRONT VIEW




4 x 2.5 inches speaker drivers,
delivering a total of 60W sound output

 PORTS ON THE BACK PANEL

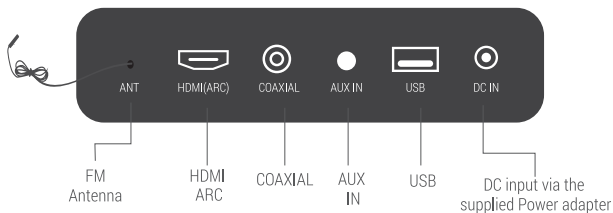

REMOTE

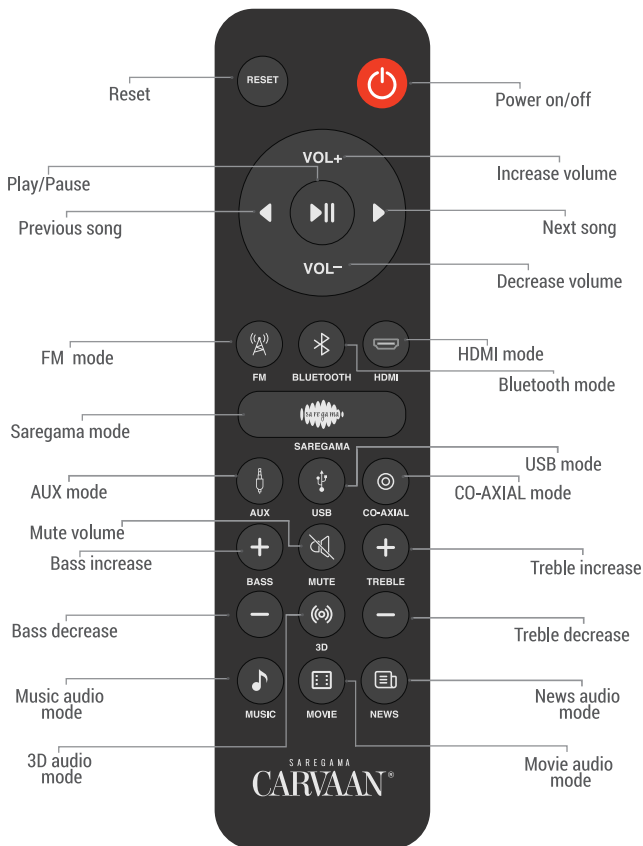 

BASS: Increase / decrease the volume of the base / low frequency notes
TREBLE: Increase / decrease the volume of the treble / high frequency notes

AUDIO MODES

To set an audio mode, press the corresponding mode button on the remote

MUSIC: Create a musical concert like experience while playing your favourite songs

MOVIE: Enjoy a true cinematic effect while watching a movie

NEWS: Hear your TV programs and news anchors – loud, crisp and clear

3D: Play games / watch sports in a stadium like environment

SAREGAMA CARVAAN APP

Download “Saregama Carvaan App” from the Apple/ Android store. Use the app to browse through the collection of songs available on Carvaan Musicbar. You can even search for a song or create playlists of songs you would like to enjoy on Carvaan Musicbar



Refer to the enclosed insert for steps on how to connect the app and Carvaan Musicbar unit.

HOW TO RESET CARVAAN MUSICBAR

If you want to reset your Carvaan Musicbar, follow the steps below:

1. Power on your Carvaan Musicbar
2. Press the USB/AUX button on the unit for 3-4 seconds
OR
Press the reset button on the remote

3. Your Carvaan Musicbar is reset to its original factory settings. All Bluetooth device connections and saved FM stations will be erased

SAFETY HANDLING

1. CARE FOR PRODUCT CARVAAN MUSICBAR

- a. Keep the product away from dust and excessive heat (heat registers, stoves etc.)
- b. Prevent spillage of water/any other liquid as this can cause failure of the product or could prove to be a potential fire hazard
- c. Clean the unit with a dry cloth only
- d. Do not walk on or pinch the power cord close to the plug
- e. Do not use a different brand of power supply cable, use the bundled power supply cable only
- f. Remove the remote battery when it is not used for longer duration
- g. Do not mix different brands or types of batteries in the remote
- h. Turn off the power source when not in use

2. OTHERS

- a. Use attachments/accessories as specified by the manufacturer
- b. Please contact an authorized service center for any repair/ servicing requirements or call the toll free no. 1800-102-7799 Or Whatsapp on 8657499000 for any queries

WARRANTY OVERVIEW

Carvaan Musicbar comes with a 1 year Warranty on all parts, excluding accessories. This includes servicing / repair or replacement of damaged parts. The warranty does not apply and does not cover the following:

- Liability for loss of data/content loaded in the product due to misuse or tampering.

WARRANTY TYPE

Home service and Pick-up warranty are provided. Home service warranty requires customers to have a technician visit their home and service the product. This type of warranty can be availed by customers in locations where there is an authorised service technician available. Pick-up warranty service requires that the product along with the original invoice to be picked up from customer's location, at sole cost and responsibility of the company.

Once the Product is serviced/repaired/replaced, the company shall be responsible to deliver the product back to the customer.



Waste electrical products should not be disposed of with household waste. Please follow disposal and recycling instructions issued by the concerned local authority.

IMPORTANT LINKS

Song List & Detailed Warranty:

www.saregama.com/musicbar

WARRANTY CARD

Customer's Name: _____

Customer's Address: _____

Product Serial No.: _____ Date of Purchase: _____

Expiry Date: _____

I accept the terms and conditions of the warranty.

Retailer's Name: _____

Retailer's Signature/Seal: _____

Customer's Signature



SAREGAMA INDIA LIMITED

FOR FEEDBACK/COMPLAINTS WRITE TO SAREGAMA INDIA LIMITED

☎ 1800 102 7799 (9:00 AM TO 9:00PM) | ✉ FEEDBACK@SAREGAMA.COM | 📞 8657499000